 


# MOBILEEDGE

## SLIM-LINE PC MEDIA REMOTE

### User's Manual

Be sure to carefully read this User's Manual for the proper use of the PC Media Remote and keep it for future reference.

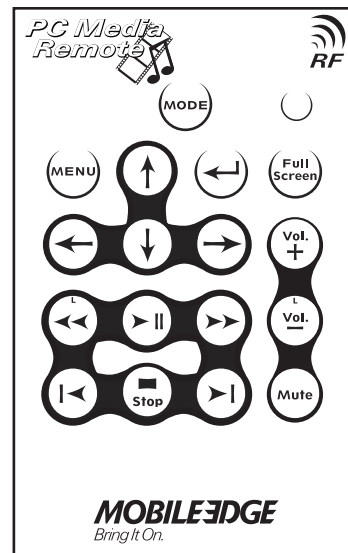

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written prior permission of Mobile Edge.

The manufacturer provides this document without warranty, or condition of any kind. The manufacturer may make improvements or change in the product described in this documentation at any time. Other products and company names herein may be the trademarks of their respective owners.

© 2006 All rights reserved.

Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation. WinDVD is a registered trademark of InterVideo, Inc. Mac, Mac OS, iTunes and DVD Player are registered trademarks of Apple Computer, Inc. Other trademarks and registered trademarks not listed above may be used in this manual.

## Introduction

### Features

#### Uses advanced Radio Frequency (RF) technology

No line-of-site to the computer necessary, so you can manage presentations or enjoy your audio and video media without having to point your PC Media Remote at the computer!

#### Works with most popular multimedia software

The PC Media Remote is compatible with Windows Media Player, iTunes for Windows, WinDVD, and DVD Player for Mac, so you can enjoy all of your media wirelessly from up to 100 feet from the computer – perfect for your media center!

#### Slim, compact and easy to carry

The PC Media Remote is the handiest and most compact computer remote control, its USB Receiver is slim enough to snap into the Remote Control, which can then be stored in the card slot of your Notebook computer.

2.4GHz RF technology, Omni-directional remote control

Range of up to 100 feet (30 meters)

No software drivers required

USB Plug and Play

### Equipment Checklist

Carefully unpack your PC Media Remote, and keep the packing materials for future reference. Check to make sure you have all the following items:

- 1x PC Media Remote (with USB Receiver)
- 1x CR2032 Battery
- 1x User's Manual
- 1x Quick Start Guide

### Product Overview

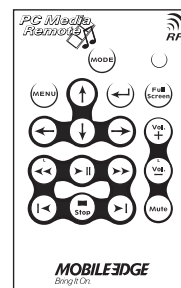


Fig. 1 - Front View

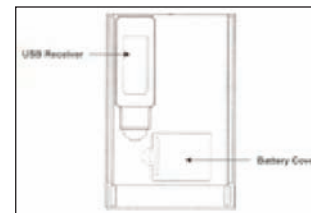


Fig. 2 - Rear View



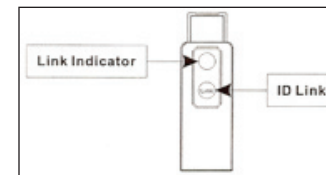


Fig. 3 - USB Receiver

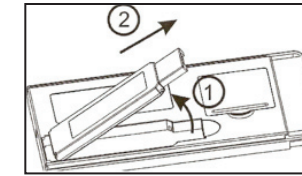

Take out the USB Receiver

1. Pull up on the top of the USB Receiver
2. Take out the Receiver

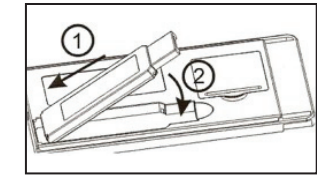

Replace the USB Receiver

1. Insert the bottom of the USB Receiver, label upwards, into the compartment
2. Take out the Receiver

## Getting Started

### Initial Setup

#### Step 1: Inserting the battery

Open the battery cover on the back and insert the battery with the (+) side up.

**NOTE:** To conserve battery life, the PC Media Remote is turned "on" only when a button is pushed. It then automatically shuts down until the next time a button is pressed.

#### Step 2: Connecting the USB Receiver to your computer

The PC Media Remote and the USB Receiver are already linked.

Take out the USB Receiver attached on the back of the PC Media Remote and plug it into an available USB port.

You may encounter the following conditions with different Operating Systems:

- Windows 2000/XP  
The operation system identifies the Receiver, prompts "USB Human Interface Device" and begins installation automatically. Please follow the instruction on the screen to complete the installation procedure.
- Mac OS  
Insert the PC Media Remote's USB Receiver into an available USB port. A screen will appear on the monitor asking the user to press two keys on the keyboard. Once this is done, a second screen will appear and offer three choices of connection. Select "ANSI."

#### Step 3: Select the appropriate mode:

There are four application modes: Windows Media Player, iTunes for Windows, WinDVD, and DVD Player for Mac. To change Mode, press and hold the Mode button for two seconds and then release. The Mode Indicator light will indicate which mode you are in:

**No light:** Windows Media Player


**Green light:** iTunes for Windows

**Orange light:** WinDVD

**Orange & Green light:** DVD Player for Mac

#### Step 4: Open the appropriate Multimedia program and enjoy!


The PC Media Remote will remember the last mode selected, and start from that mode the next time it is used.

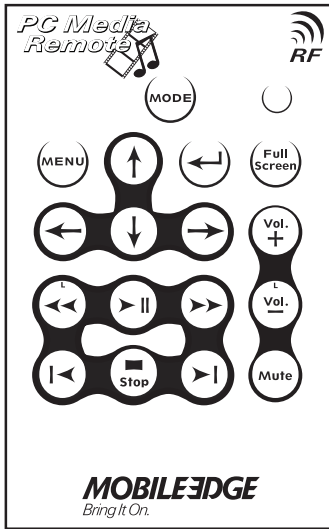


## Buttons and controls

Use the following chart to reference all of the buttons and features of your PC Media Remote.


For your convenience, we have grouped buttons together in control schemes, making it easier to find and use buttons that are frequently used for specific functions and navigation.

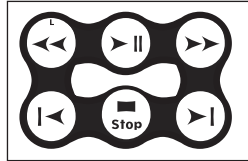


Media Controls

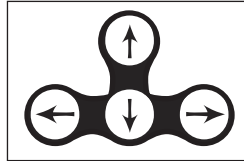

Navigational Controls

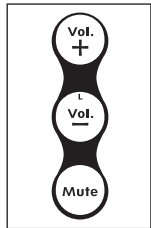

Volume Controls

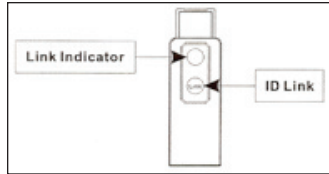

Button	Function (per mode)			
	No Light	Green Light	Orange Light	Orange & Green
(MODE)	Press, hold for 1 second and release to change the mode. The mode indicator light will indicate the mode you are in.			
(Light)	Windows Media Player Mode	iTunes for Windows Mode	WinDVD Mode	DVD Player for Mac Mode
(MENU)	Press and hold for 3 seconds to use the laser pointer - only available in PowerPoint mode. The laser will automatically turn off when left idle for 30 minutes.			
(Up Arrow)	Move Up	Move Up	Move Up	Move Up
(Down Arrow)	Move Down	Move Down	Move Down	Move Down

continued on next page.

Button	Function (per mode) cont.			
	No Light (Windows Media Player Mode)	Green Light (iTunes for Windows Mode)	Orange Light (WinDVD Mode)	Orange & Green (DVD Player for Mac Mode)
(Left Arrow)	Move Left	Move Left	Move Left	Move Left
(Right Arrow)	Move Right	Move Right	Move Right	Move Right
(Center Arrow)	Confirm Selection	Confirm Selection	Confirm Selection	Confirm Selection
(Full Screen)	Full Screen Mode (Only available when playing)	N/A	Full Screen Mode	Full Screen Mode
(Fast Rewind)	Fast Rewind	Fast Rewind	Fast Rewind	Fast Rewind
(Play/Pause)	Play/Pause	Play/Pause	Play/Pause	Play/Pause
(Fast Forward)	Fast Forward	Fast Forward	Fast Forward	Fast Forward
(Previous Selection)	Previous Selection	Previous Selection	Previous Chapter	Previous Chapter
(Stop)	Stop	Stop	Stop	Stop
(Next Selection)	Next Selection	Next Selection	Next Chapter	Next Chapter
(Vol. +)	Increase Volume	Increase Volume	Increase Volume	Increase Volume
(Vol. -)	Decrease Volume	Decrease Volume	Decrease Volume	Decrease Volume
(Mute)	Mute	Mute	Mute	Mute
(Fast Rewind) + (Vol. -)	Link USB Receiver and PC Media Remote. Note: Do not change unless the PC Media Remote does not work. Press Link key on USB Receiver until red light comes on. Press (Fast Rewind) and (Vol. -) until the red light on the Remote blinks. Red and green LED lights on the Presenter will blink alternately.			

**Note:** In Windows Media Player, the Menu and Direction buttons are available only when in Full Screen.

Please remember to check the mode indicator light before use.

## Additional Information

### Specifications

#### System Requirements

Windows 98SE/ME/2000/XP

Mac OS 9.1 or higher

Available USB port

Multimedia software

#### System

Frequency range: 2.4GHz

Remote range: Approx. 100 feet (30 meters)

Operating voltage: Remote control 2.4V-3.3V, Laser 2.6V-3.3V

Power: CR2032 battery x1

Output power: Under 1 mW

#### Physical Dimensions

Size: 3.38" x 2.12" x .2" (86 x 54 x 5 millimeters)

Weight: Approx. 74 oz (21 grams) with the Receiver and battery

#### Environmental Requirements

##### Temperature:

Operating: 32° F (0° C) - 140° F (60° C)

Non-operation: 14° F (-10° C) - 149° F (65° C)

##### Humidity (non-condensing):

Operating: 10%-85% RH

Non-operating: 10%-95% RH

#### Warranty: One Year

#### Appendix A Regulatory Compliance FCC Statement on Class B

This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or move the Receiver (a USB Male to Female cable may be required). Increase the separation between the equipment and Receiver.
- Connect the TV equipment into an outlet on a circuit different from that to which the computer and Receiver are connected.
- Consult the dealer or an experienced radio TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- This device does not cause harmful interference.
- This device may accept any interference received, including interference that may cause unexpected operation.

# MOBILEEDGE

t: 714.399.1400

f: 714.399.1401

www.mobileedge.com

© 2006 Mobile Edge. All Rights Reserved.

Features and Specifications subject to change without notice.