


Installation Instructions

To Lock:

1. Place Bracket onto the D-Sub (Com. Port, VGA Port) by screwing tightly two Posts of the Bracket.
2. Slide the lock housing down to the posts and scramble the dials. Then, the locking process is completed..

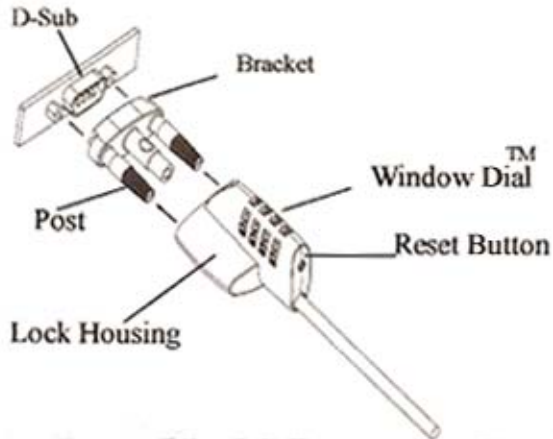

To Open:

1. Turn the dials to the opening number and align to the Window DialTM.
2. Pull the lock housing away out of the Bracket.
3. You may leave Bracket on D-Sub., or screwing back Posts to release Bracket away from D-Sub.

To Reset your Combination

1. Turn the dials to the preset combination 0-0-0-0 and align to the Window DialTM.
2. Press the Reset Button with a mini screw driver or other tools and turn counterclockwise 90°.
3. Turn the dials to your own desired combination.
4. Turn the Reset Button clockwise 90° to its original position.
Your lock is now ready to open at its new combination.